



## Repair Instructions for the Display Board and Main Control board for the VT-60

### Display Board Changing

1. Remove the applied strip from the control board to reveal the four control board screws (See Image 1).



Image 1

2. Remove the four screws from the control board cover (image 2) and carefully remove the cover (image 3).



Image 2



Image 3

3. Remove the four screws from the display boards (image 4) and disconnect the two wires (image 5).



(Image 4)



(Image 5)

4. Replace the display board.
  - a. Connect the two wires and fasten the four fixture screws on the display board.
  - b. Fasten the four screws on the control board cover.
  - c. Reapply the strip to the face of the control board.

### **Changing the Main Control Board**

1. Remove the screw from the back covering board (image 6) and remove the cover (image 7).

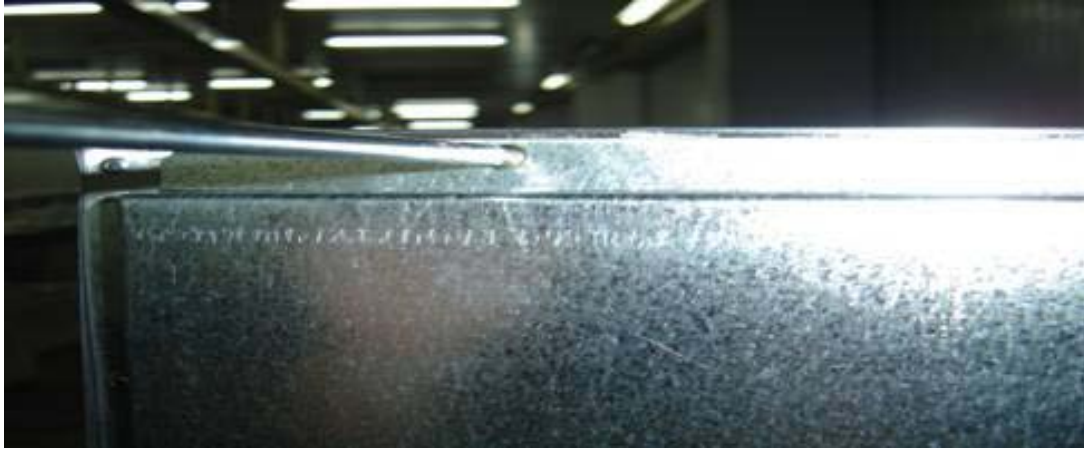


Image 6



Image 7

2. Remove the screw from the main control board box (image 8) and remove the screw from the main control board box covering (image 9). Remove the covering.



Image 8



Image 9

3. Remove the four fixture screws from the main control board. Disconnect the four wires (image 10).


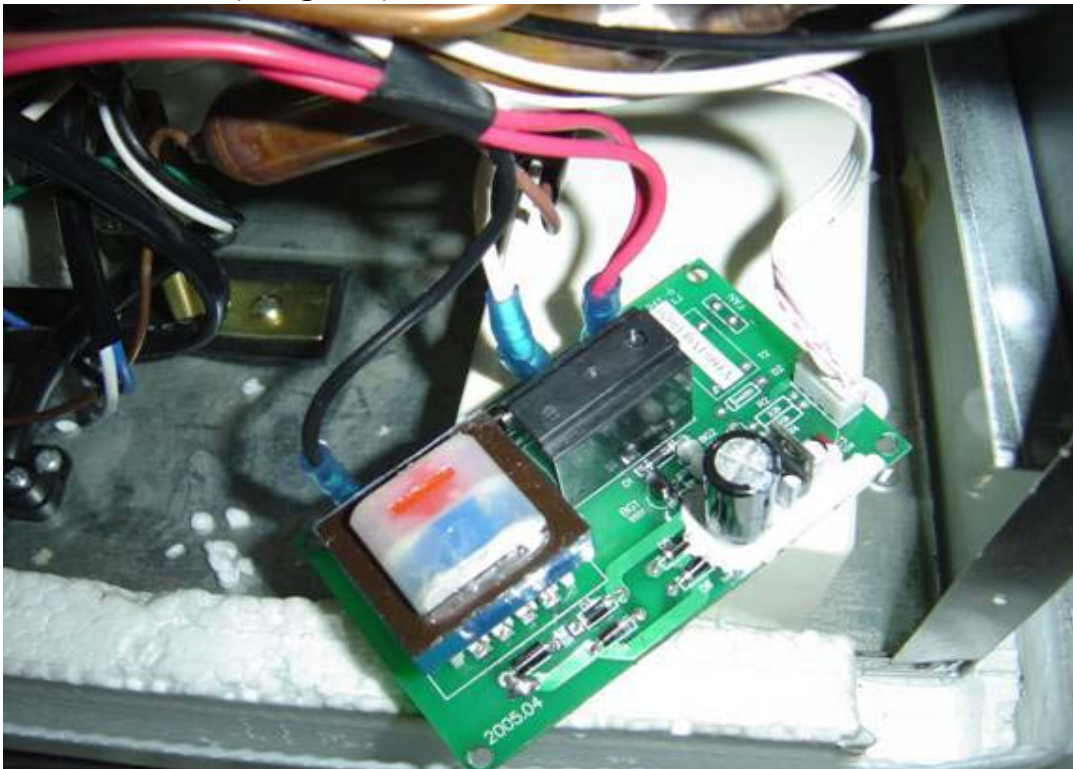


Image 10

*Note: Before disconnecting the wires, note the correct placement of each wire to ensure that each wire is properly reconnected after repairs are made (image 11).*

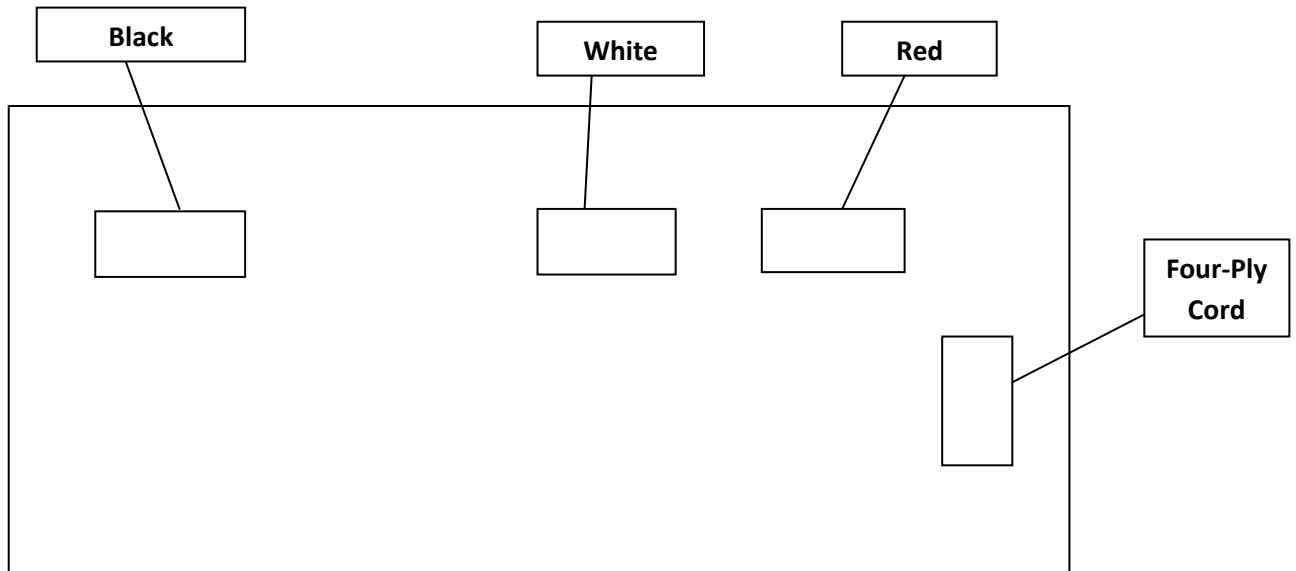

4. Replace main control board.
  - a. Connect the four wires and fasten the main control board using the four fixture screws.
  - b. Fasten the screw of the main control board box covering and fasten the screw of the main control board box.
  - c. Fasten the screw on the back covering.