

Vinotemp®

VT-36, VT-36TS, VT-46TS-2Z, & VT-54TS RELAY OVERLOAD INSTALLATION INSTRUCTIONS


The electronic components that you will be receiving are simple plug in and plug out parts.

Be sure to have the unit *unplugged* while performing the installation.

TOOLS REQUIRED: flat-head screwdriver.


You may need to lay on your side to have easier access to the components

INSTRUCTIONS:

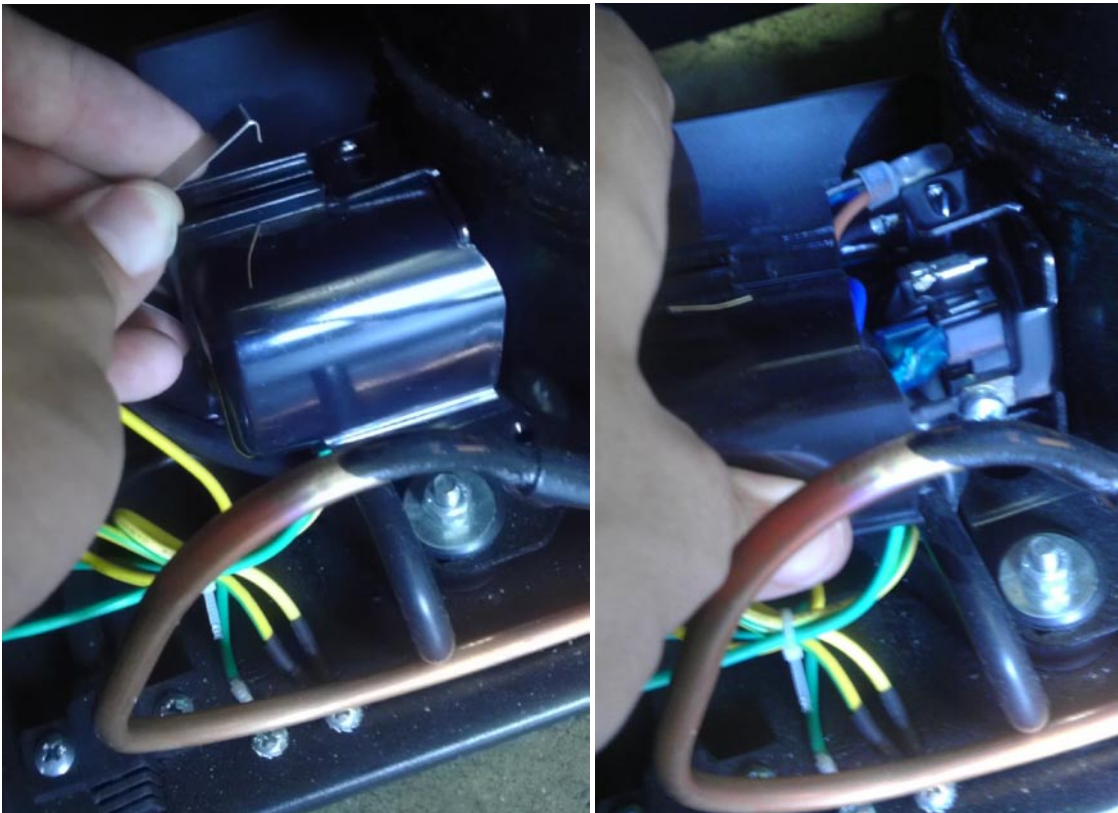

The components are situated under the black plastic casing held in place by a metal band located at the rear of the unit towards the bottom.

Unhook the metal band and slide the casing off to the left to reveal the components. Take note of how they are mounted and wired in.

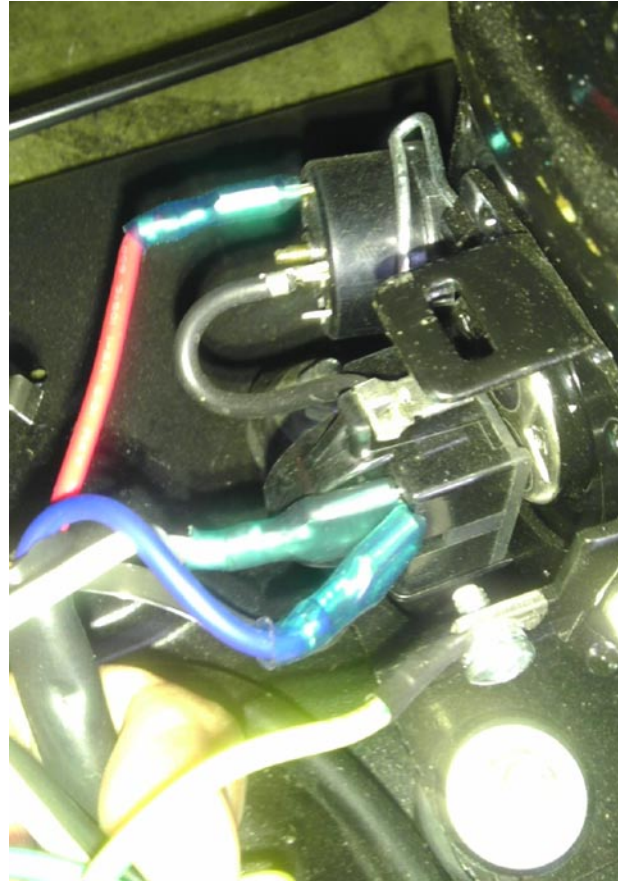

With a flat-head screwdriver, wedge the components off the pegs on the side of the compressor (big black motor). Set the old components aside.

IMPORTANT: DO NOT MIX OLD PARTS WITH NEW PARTS

ADDING THE REPLACEMENT PARTS:



First, mount the overload (round black piece) on the single peg first.



******PLEASE NOTE: THE OVERLOAD WILL HAVE A 3 INCH BLACK WIRE WITH A FEMALE CONNECTOR THAT WILL CONNECT DIRECTLY TO THE TOP UPPER PIN.**



Next, mount the square black piece underneath the colored wires accordingly.

- **THE OVERLOAD PIECE MOUNTS ON THE UPPER SINGLE PEG AND CONNECTS TO THE RED WIRE.**
- **THE RELAY PIECE MOUNTS ON THE TWO LOWER PEGS AND CONNECTS TO THE BLUE/WHITE WIRE.**

Once you have completed these installation instructions, plug the unit back into its designated electrical outlet.

Allow the unit to run its course before you attempt to put the casing back on.

Questions?

Contact Vinotemp customer service at 1-800-777-8466 or info@vinotemp.com.