

Replace the lock of the VT58

1. Screw out the plastic cover of the lock.



2. Take out the cover.



3. Let the fixer loose with the plier.



4. Pull out the lock.



5. Replace with new lock



6. Install the lock into the door frame.



7. Replace a new fixer and fasten the lock.





8. Assemble the plastic cover.

