


# Vinotemp®

## **Instructions for Changing a Cooling System**


1. Remove the screws from the back cover.




2. Remove the back cover and set it off to the side.

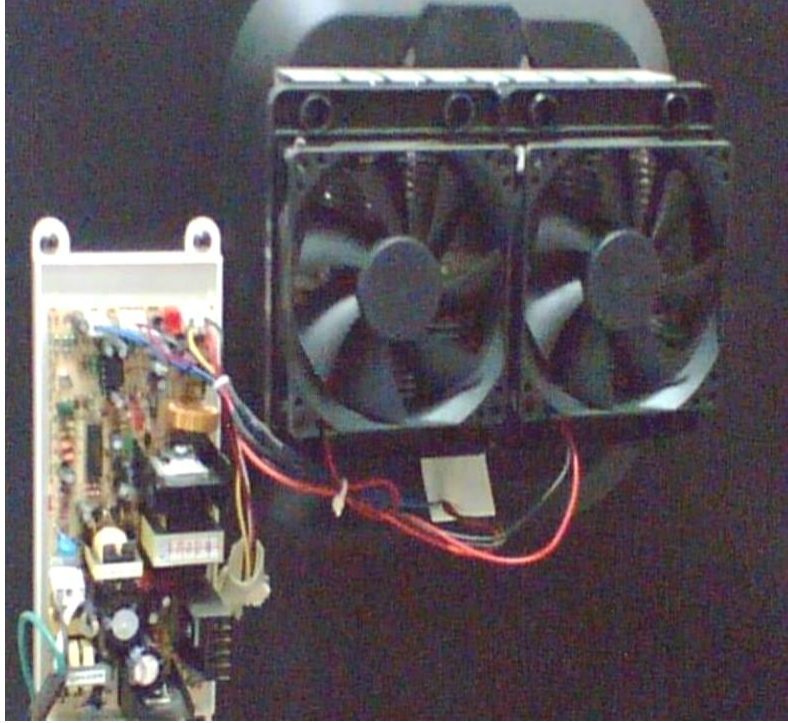


3. Cut the fastener.

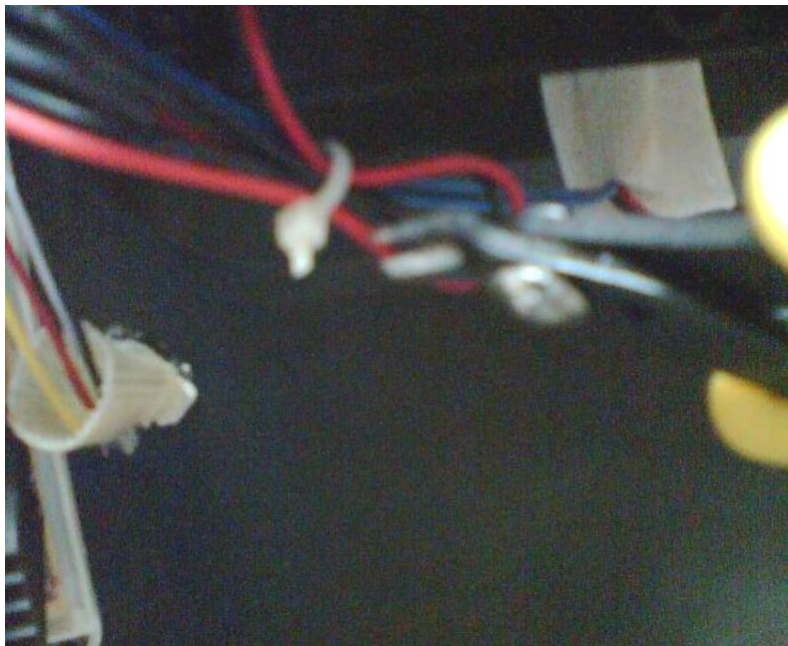

4. Disconnect the wires.

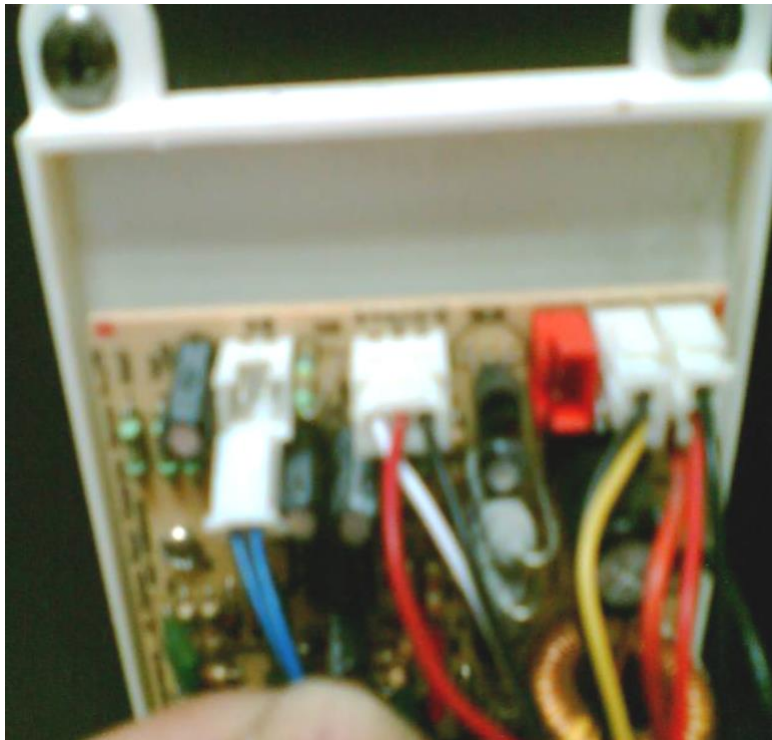


5. Disconnect the AC cord.

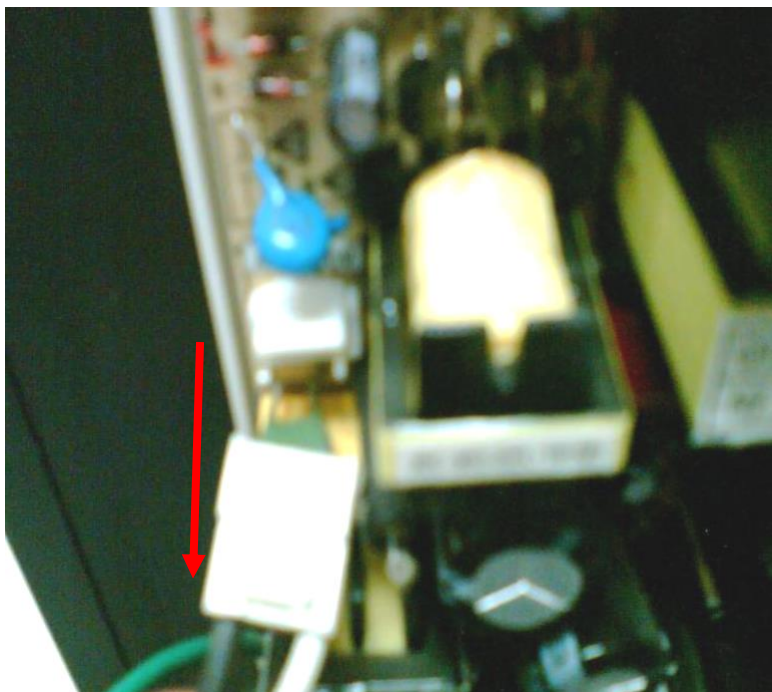


6. Remove the screws from the PCB.



7. Remove the screws from the PCB and find the two wires for the cooling system.

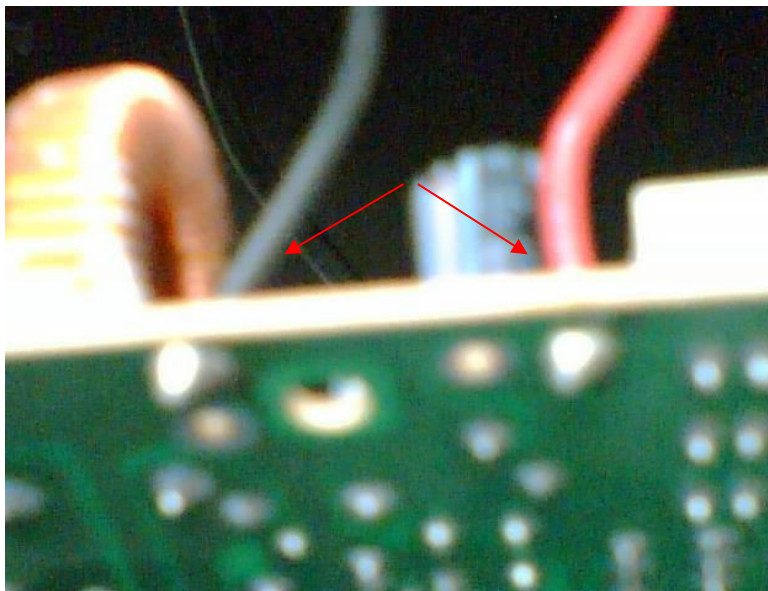

8. Remove the cooling system wires using an iron.

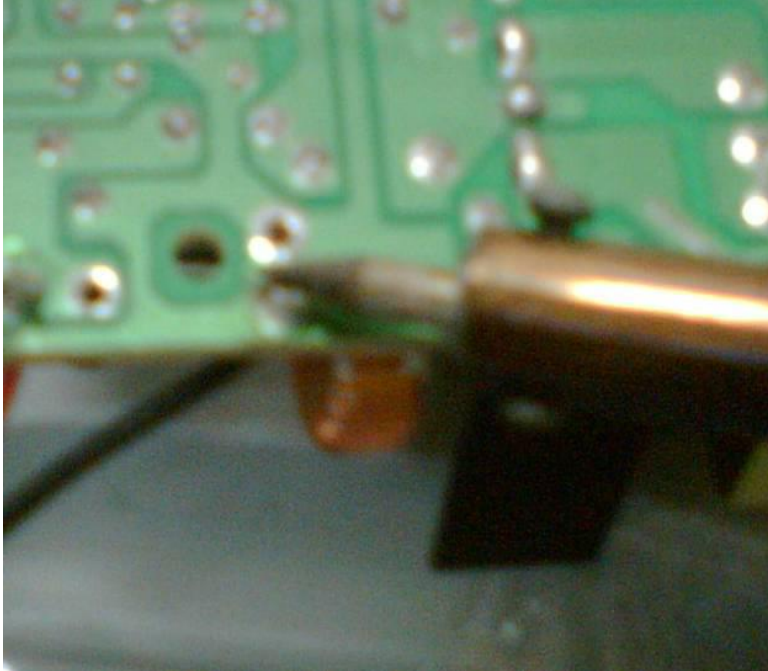

9. Remove the fan screws.



10. Remove the fans.




11. Remove the screws from the aluminum.



12. Take out the cooling system.



13. After removing the cooling system, find the connector for the cold fan.

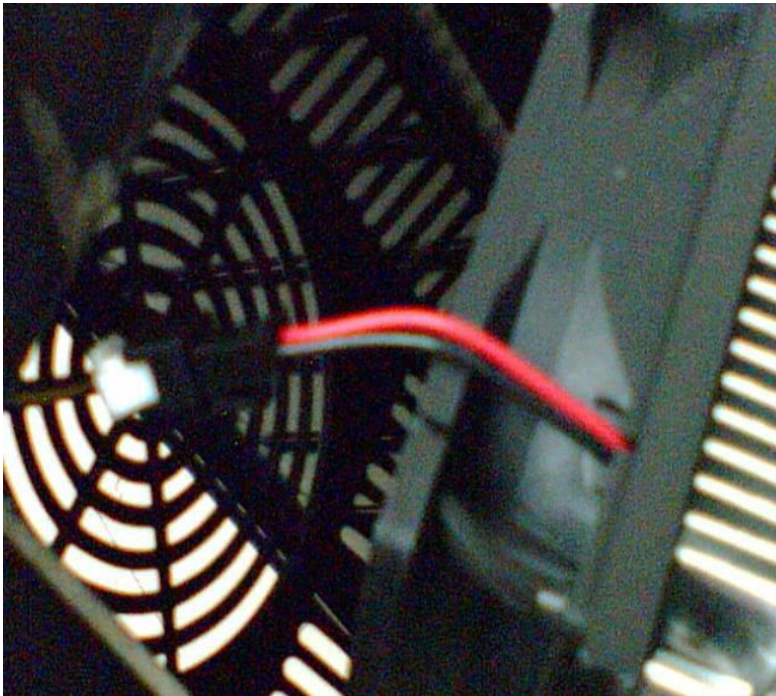

14. Unplug the connector.




15. Remove the screws from the cold fan bracket.




16. When installing the cold fan, pay close attention to the direction of the connector.



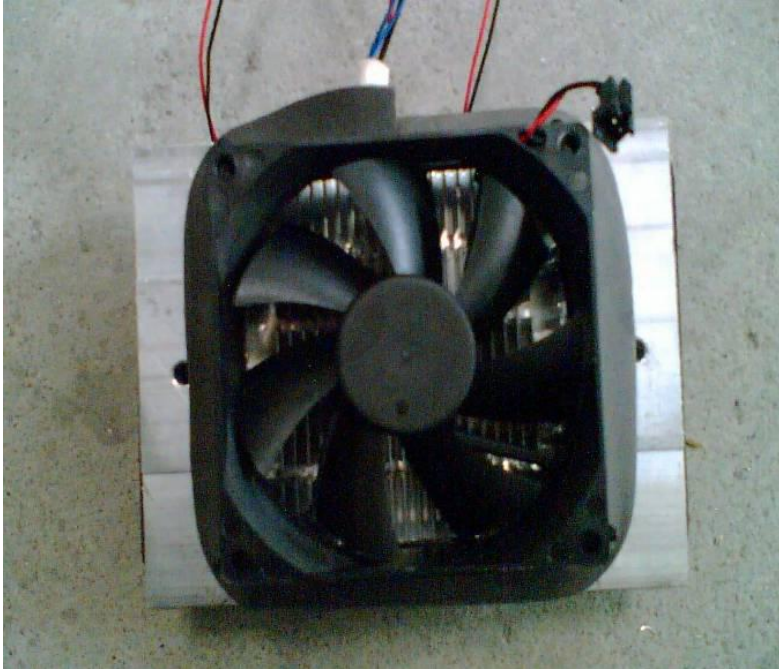

17. Plug the connector in.

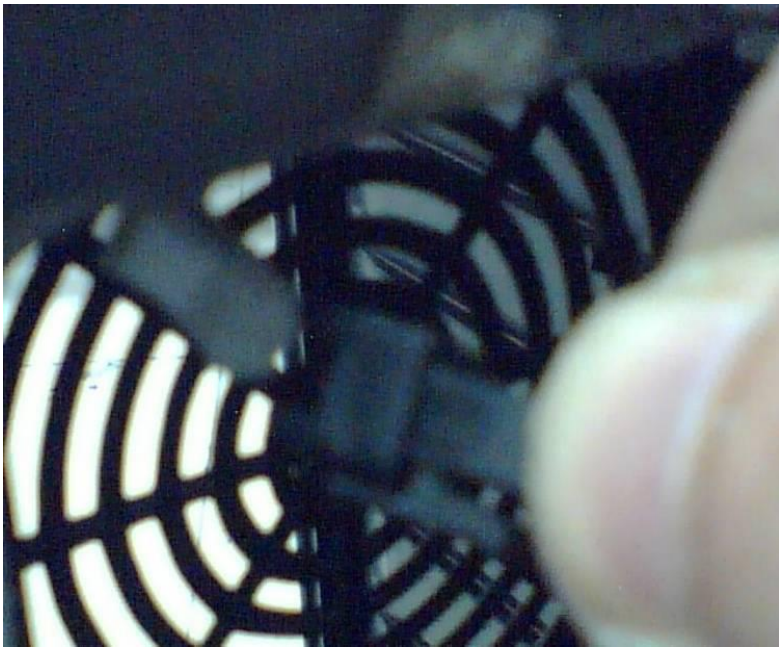

18. Place the new cooling system back in the cabinet.



19. Fasten the screws on the aluminum.




20. Place the fans back into position (on the third groove of the aluminum).




21. Fasten the screws.



22. Connect the cooling system wires to the power control board (RED for + and BLACK for -).

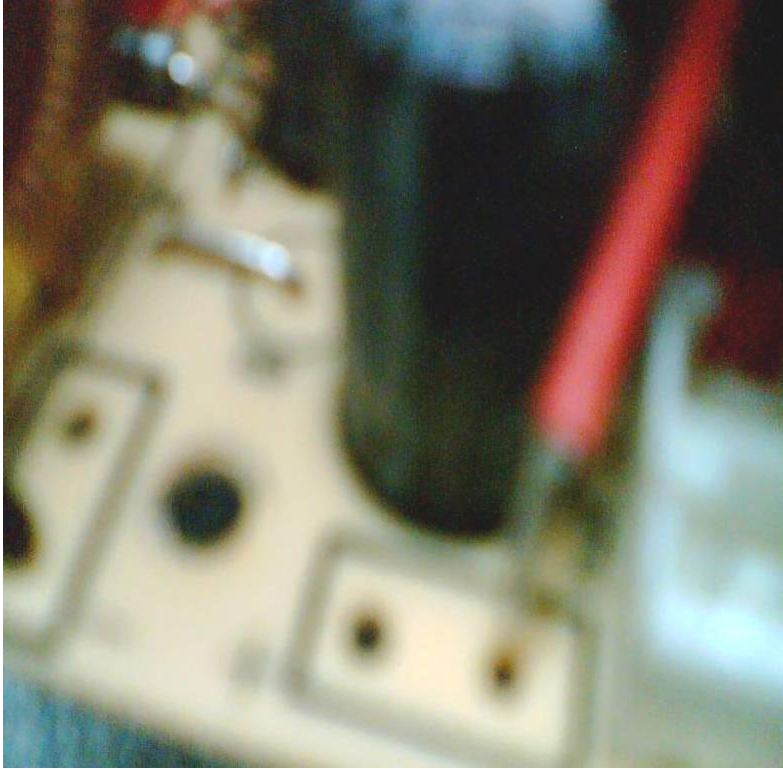


23. Attach the wires.

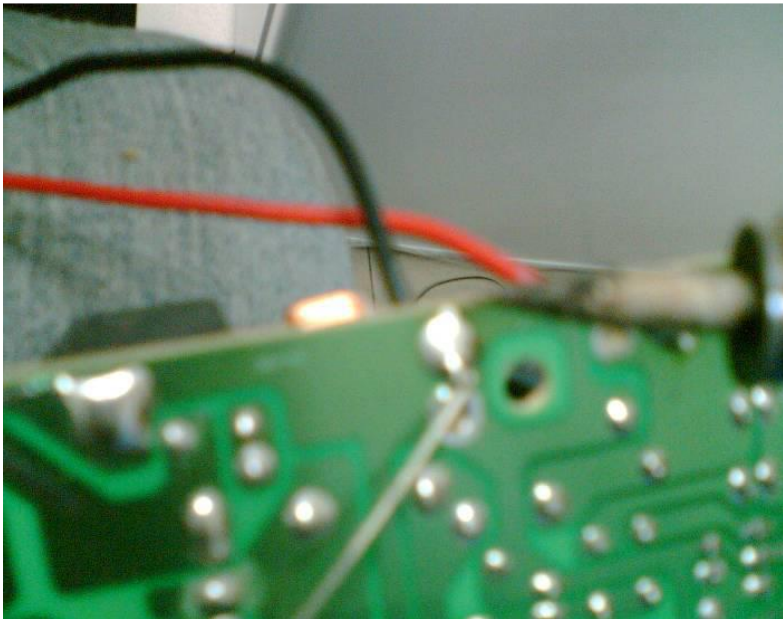


24. Place the power control board back in the cabinet.




25. Plug all connectors in.

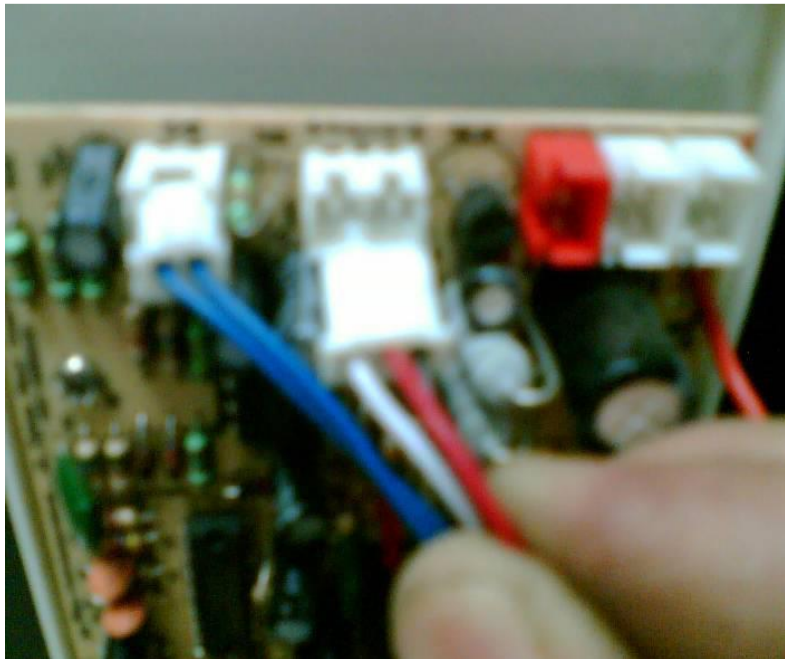

26. Plug in the AC cord.

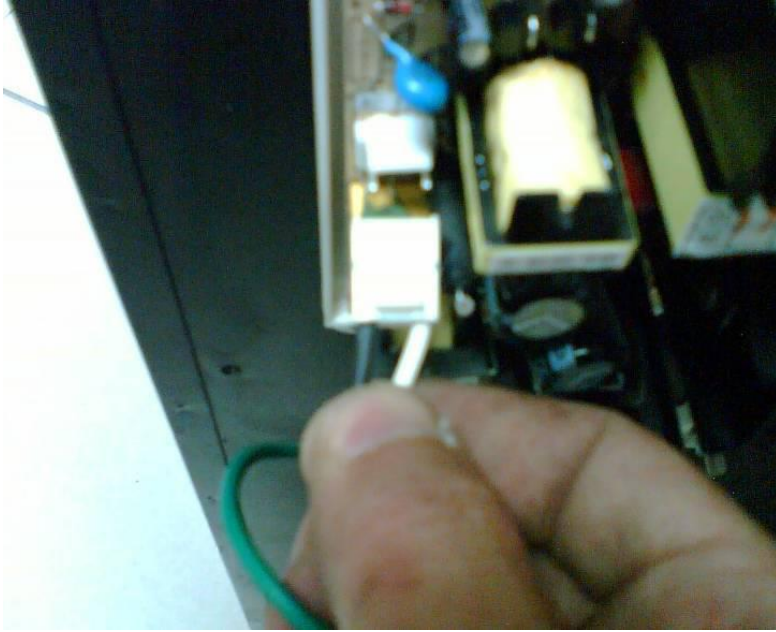

27. Fasten the wires together.

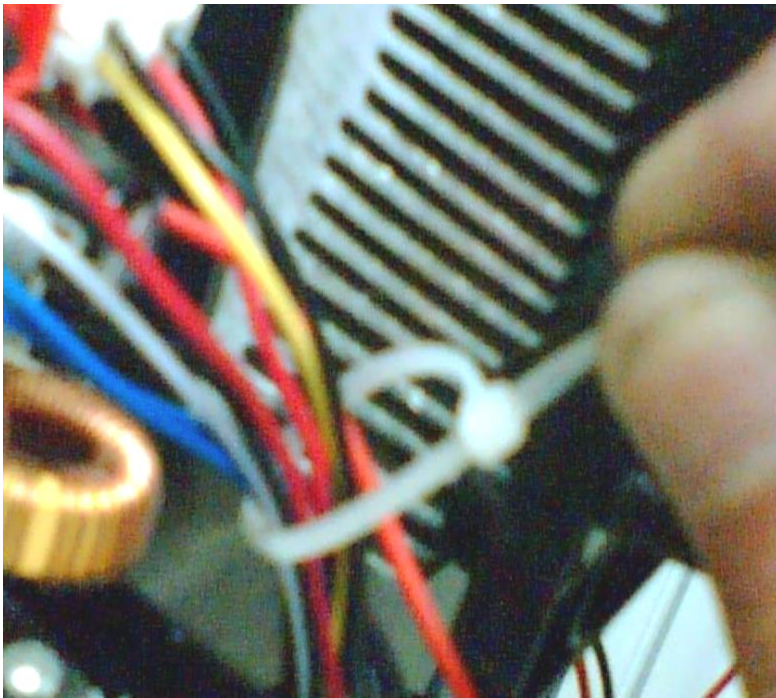

28. Secure the back panel.

