




A PROUD HERITAGE OF EXPERIENCE AND QUALITY

PEG RACKING INSTRUCTIONS FOR CONCRETE WALL

TOOLS SUGGESTED (NOT INCLUDED) : Hammer Drill, 3" x 2 1/2" hammer drill bit, Drop in anchor setting tool 3/8", hammer, liquid nail, vacuum, 1 5/8" drop in anchor 1/2" thread.

1

Below is everything included with our Modern Peg Racking (pegs, washers, bolt screws).

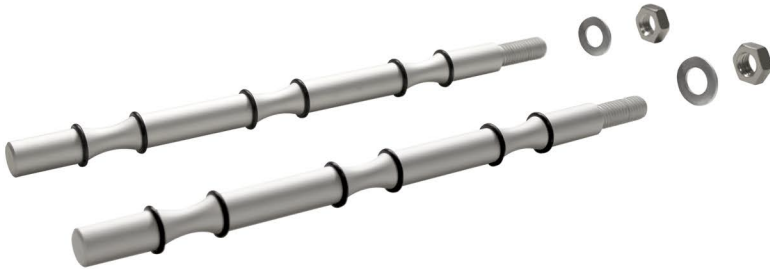


2

Make sure you are drilling the holes level and the holes are drilled straight into the concrete. Hammer drill a 1/2" diameter hole 2 1/2" deep. Vacuum dust out of hole.



3

Inject a small amount of liquid nail into rear of hole. Insert anchor into the hole, using setting tool to insert anchor all the way into the hole.

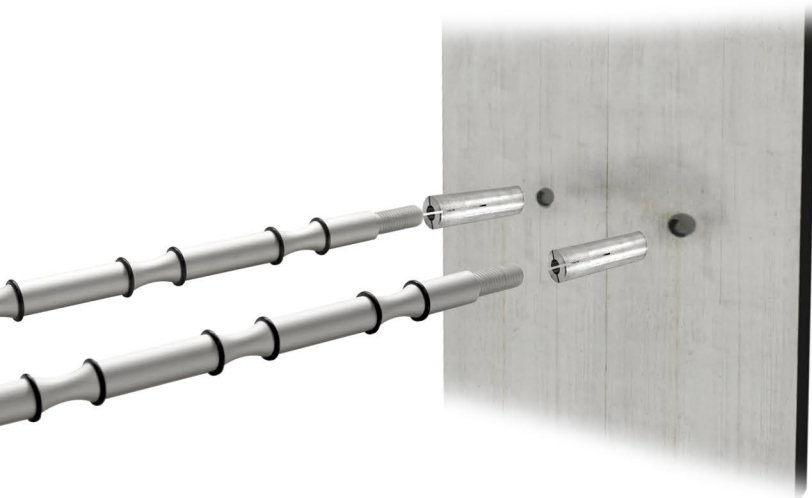

4

Once set, screw in Peg for rack.

